


Alarm & Buzzer set up

Attach the vibration sensor to the bottom of the door

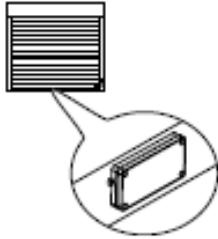

Plug the buzzer into the alarm terminal on the control panel



Screw the buzzer through one of the glands on the bottom of the control panel housing



Press the white MEM/DEL button in your control panel 6 times and hold on the 6th press (top right – next to the dip switches) – you will hear a long beep.



Keep hold of the MEM/DEL button and at the same time knock the vibration sensor (a red LED will come on the vibration sensor)

The long beep will change to a rapid beep – this means the alarm is now programmed.

Test your alarm by knocking the vibration sensor

Your alarm will stay active for 1 minute or until you switch it off. To switch it off press up or down on either your remote control or front cover.

For sensitivity settings on the vibration sensor see instructions.