

## Programming a transmitter to 2 channels

Press the white MEM/DEL button in the control panel 2 times and **hold** on the 2<sup>nd</sup> press – you will hear a long beep

Keep hold of the MEM/DEL button and at the same time press the selected button on your transmitter.

The long beep will change to a rapid beep – this means the channel is now programmed.

Release both buttons and test your transmitter

The channel chosen will operate open/stop and the other button as close/stop

## Deleting all transmitters

Press the white MEM/DEL button in the control panel 5 times and **hold** on the 5<sup>th</sup> press – you will hear rapid beeps from the control panel.

Keep hold of the MEM/DEL button until you hear a long beep – this will take approx. 10 seconds.

When you hear the long beep take your finger off the button and make sure everything is deleted off

## Wireless Keypad Instructions

PROGRAMMING THE KEYPAD TO THE RECEIVER – Mode 2 (open & close using 2 buttons)

Enter the code into the keypad.

Within 5 seconds, press the MEM button on the receiver twice keeping it held down

You will then hear a continuous beep

Whilst keeping hold of the MEM button press number 1 on the keypad

The continuous beep changes to a fast beep.

When you hear this the keypad has been programmed.

## CHANGING CODE

Enter original code 12345

Now press M1 button (white button on the back of the keypad)

After the beep enter your new 5 digit code

Within 1 second of entering input the code in again.

When you hear a continuous beep for approx. 2 seconds this confirms the code has been changed.

**PLEASE NOTE – AFTER 5 SECONDS OF ENTERING THE CODE AND MAKING A COMMAND THE KEYPAD WILL LOCK AGAIN AND YOU WILL HAVE TO ENTER THE CODE BEFORE DOING ANOTHER COMMAND**

