

SUNTOP / ROLTOP 868 Intermediate Limit Setting

Programming Intermediate Limits

Starting from down position,
Run motor up keeping the up
button pressed

When the up intermediate
position is reached, press
also the stop button

Motor will stop in this position

This sets the UP intermediate
position

Starting from UP position, Run
motor down keeping down
button pressed

When the down intermediate
position is reached press the
stop button

Motor will stop in this position

To test these positions, press in
quick succession twice up or
down button

Motor will drive to
intermediate position

Programming Intermediate Limits in SLOW Mode

Only possible on motors with soft
brake and more than 23rpm.

Starting from down position,
Press UP & STOP buttons
together for 3 seconds

Run motor up keeping the up
button pressed

When the up intermediate
position is reached, press
also the stop button

Motor will stop in this position

Starting from UP position, Press
UP & STOP buttons together for
3 seconds

Run motor down keeping
down button pressed

When the down intermediate
position is reached press the
stop button

Motor will stop in this position

