


Wired safety edge set up

Remove the resistor from terminals 16 & 17

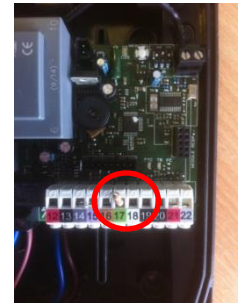

Wire your spiral cable into the control panel **Brown 16**, **Green 17**, White 18



Your spiral cables comes pre-wired into the junction box so all you need to do is wire the optical eyes in

If the terminal block is at the top the wiring from left to right should be as follows:

1 x **Brown** , 1 x White , 1 x **Green** – 2 x **Green** , 2 x White , 2 x **Brown**



If the terminal block is at the bottom the wiring from left to right should be as follows:

2 x **Brown** , 2 x White , 2 x **Green** – 1 x **Green** , 1 x White , 1 x **Brown**

